

TORQUE – CONVERTER


		=		

1. Enter the value in the left window and select the given unit.
2. Select the desired unit in the right window and click on CALCULATE.
3. Reset the unit calculator for a new calculation with DELETE.


Given unit	Desired unit								
	= mN·m	= cN·m	= N·m	= ozf·in	= lbf·in	= lbf·ft	= gf·cm	= kgf·cm (kp·cm)	= kgf·m (kp·m)
1 mN·m	1	0.1	0.001	0.142	0.009	0.0007	10.2	0.01	0.0001
1 cN·m	10	1	0.01	1.416	0.088	0.007	102	0.102	0.001
1 N·m	1000	100	1	141.6	8.851	0.738	10197	10.2	0.102
1 ozf·in	7.062	0.706	0.007	1	0.0625	0.005	72	0.072	0.0007
1 lbf·in	113	11.3	0.113	16	1	0.083	1152.1	1.152	0.0115
1 lbf·ft	1356	135.6	1.356	192	12	1	13826	13.83	0.138
1 gf·cm	0.098	0.01	0.0001	0.014	0.0009	0.00007	1	0.001	0.00001
1 kgf·cm (kp·cm)	98.07	9.807	0.098	13.89	0.868	0.072	1000	1	0.01
1 kgf·m (kp·m)	9807	980.7	9.807	1389	86.8	7.233	100000	100	1


MHH ENGINEERING CO. LTD.

Bramley, Guildford, Surrey GU5 0AJ, UK

Sales  **44 (0)1483 898536

<http://www.torqueleader.com>

 **44 (0)1483 892772

 **44 (0)1483 898555

Email: mhh@torqueleader.co.uk